



**STORED PRESSURE, HAND PORTABLE  
CARBON DIOXIDE  
MODELS: CO5LB, CO10LB, CO15LB, CO20LB**

**Owner's SERVICE MANUAL  
NO.ZX-UL-SM003**

**INSTALLATION, OPERATING & SERVICING INSTRUCTIONS**

All fire extinguishers should be installed, inspected and maintained in accordance with the National Fire Protection Association standard titled "Portable Fire Extinguishers", NFPA-10 and the requirements of local authorities having jurisdiction.

When install, inspection, maintenance is required, it should be performed by trained persons having proper equipment. Fire extinguishers are pressure vessels and must be treated with respect and handled with care. They are mechanical devices and require periodic maintenance to be sure that they are ready to operate properly and safely.

Victory strongly recommends that the maintenance of portable fire extinguishers be done by a trained professional – your local authorized Victory Distributor.

Victory Corporation makes original factory parts available to insure proper maintenance – USE OF SUBSTITUTE PARTS RELEASES VICTORY OF ITS WARRANTY OBLIGATIONS. Victory parts have machined surfaces and threads that are manufactured to exacting tolerances. O-rings, hoses, nozzles, and all metal parts meet precise specifications and are subjected to multiple in-house inspections and tests for acceptability. DO NOT SUBSTITUTE.

**WARNING:**

CARBON DIOXIDE EXTINGUISHES FIRE BY DILUTING THE SURROUNDING ATMOSPHERE WITH INERT GAS KEEPING THE OXYGEN LEVEL BELOW THE PERCENTAGE REQUIRED FOR COMBUSTION. WHEN IT IS USED IN AN UNVENTILATED SPACE, SUCH AS A SMALL ROOM, CLOSET OR OTHER CONFINED AREA, PROLONGED OCCUPANCY OF THAT SPACE CAN RESULT IN LOSS OF CONSCIOUSNESS AND POSSIBLE DEATH DUE TO OXYGEN DEFICIENCY.

WHEN DISCHARGING CARBON DIOXIDE FOR RECHARGE, MAINTENANCE AND SERVICING, IT SHOULD ALWAYS BE DISCHARGED TO AN OUTSIDE ATMOSPHERE FOR THE REASONS STATED ABOVE.

ALWAYS WEAR HAND AND FACE PROTECTION TO AVOID SKID CONTACT – CO<sub>2</sub> (GAS OR SNOW) IS EXTREMELY COLD AND COULD CAUSE BURNS OR FROSTBITE

**CAUTION:**

PERSONS EXPECTED TO USE THIS FIRE EXTINGUISHER SHOULD BE TRAINED IN INITIATING ITS OPERATION AND IN THE PROPER FIRE FIGHTING TECHNIQUE.

**Marine approval is valid only when the extinguisher is equipped with an approved marine type bracket.**

#### **RECHARGE FIRE EXTINGUISHERS IMMEDIATELY AFTER ANY USE**

##### REFERENCES IN THIS MANUAL:

NFPA-10 Portable Fire Extinguishers  
  
CGA C-1 Methods for Hydrostatic Testing of Compressed Gas Cylinders  
CGA C-6 Standard for Visual Inspection of Compressed Gas Cylinders

##### AVAILABLE FROM:

National Fire Protection Association  
1 Batterymarch Park, P.O. Box 9101  
Quincy, MA 02269-9101  
  
Compressed Gas Association, Inc.  
4221 Walney Road, 5th Floor  
Chantilly, VA 20151-2923

#### **Victory Fire & Gas Inc.**

1713 Lewis Street  
Bay City, MI 48706  
Office - 989.322.0856  
E-Mail: [info@victoryfiregas.com](mailto:info@victoryfiregas.com)  
<http://www.victoryfiregas.com>

### **INSTALLATION**

Your layout and particular hazards dictate the placement of fire extinguishers. NFPA-10 requires that hand portable extinguishers with a gross weight less than 40 lbs. be hung with the top of the extinguisher **not more** than 5 ft. (1.53 m) above the floor. Extinguishers having a gross weight greater than 40 lbs. (18.14 kg) should be installed so that the top of the extinguisher is **not more** than 3 . ft. (1.07m) above the floor. All extinguishers should be in an accessible location and near an exit. **Never install the extinguisher in a location where a potential hazard would prevent easy access.** The operational temperature range for this extinguisher is -22°F to +120°F (-30°C to +49°C) [please see the nameplate on your extinguisher]. The extinguisher should be adequately protected if temperatures outside of this range are anticipated. Keep the extinguisher clean and free from dirt, ice, chemicals and any contaminants that may interfere with its proper operation. **DO NOT FUNCTIONALLY TEST THIS FIRE EXTINGUISHER.** (Testing or any use may cause the extinguisher to gradually lose pressure over a period of time and make the extinguisher ineffective.) Never throw an extinguisher into a fire because rapid heat buildup could cause pressure expansion and exceed the limitations of the cylinder.

### **OPERATION**

**NOTE: Persons expected to use this extinguisher should be trained in initiating its operation and in the proper firefighting technique. Familiarize all personnel with this information before an emergency occurs.**

1. Remove the extinguisher from wall hanger or bracket.
2. Hold the extinguisher upright, twist and pull the ring (safety) pin, snapping the plastic lock wire seal.

3. Starting back a minimum of 8 feet from the fire, grasp the nozzle and aim at the base of the fire nearest you.
4. Keeping the extinguisher upright, squeeze the lever to discharge and sweep the chemical agent stream from side to side. Work the fire away from you while being alert for flashbacks. Move closer as the fire is extinguished but not so close as to scatter or splash the burning material.
5. When the fire is out, stand by and watch for possible re-ignition.
6. Evacuate and ventilate the area immediately after extinguishing the fire. The fumes and smoke from any fire may be hazardous and can be deadly.

**CAUTION: DISCHARGE TIME AND EFFECTIVE RANGE OF THE AGENT THROW VARIES ACCORDING TO MODEL – SEE THE SPECIFICATION LITERATURE FOR YOUR EXTINGUISHER.**

#### **RECHARGE FIRE EXTINGUISHERS IMMEDIATELY AFTER ANY USE**

**VICTORY CORPORATION DOES NOT SERVICE, MAINTAIN OR RECHARGE FIRE EXTINGUISHERS. THIS MANUAL IS PUBLISHED AS A GUIDE TO ASSIST QUALIFIED SERVICE PERSONNEL IN THE INSPECTION, MAINTENANCE AND RECHARGE OF VICTORY FIRE EXTINGUISHERS ONLY. NO INSTRUCTION MANUAL CAN ANTICIPATE ALL POSSIBLE MALFUNCTIONS THAT MAY BE ENCOUNTERED IN THE SERVICE OF FIRE EXTINGUISHERS. DUE TO THE POSSIBILITY THAT PRIOR SERVICE PERFORMED ON THIS EQUIPMENT MAY HAVE BEEN IMPROPERLY DONE, IT IS EXTREMELY IMPORTANT THAT ALL WARNINGS, CAUTIONS AND NOTES IN THIS MANUAL BE CAREFULLY OBSERVED. FAILURE TO HEED THESE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY.**

**VICTORY ASSUMES NO LIABILITY FOR SERVICE, MAINTENANCE OR RECHARGE OF FIRE EXTINGUISHERS BY PUBLISHING THIS MANUAL.**

#### **INSPECTING THE EXTINGUISHER**

The inspection procedures outlined below may not be sufficient for every jurisdiction or location and should be used in conjunction with the NFPA 10 Standard for Portable Fire Extinguishers, 2007 Edition.

**This extinguisher should be inspected at regular intervals (monthly or more often if circumstances dictate) to insure that it is ready for use. Inspection is a "quick check" that a fire extinguisher is available and is in operating condition. It is intended to give reasonable assurance that the fire extinguisher is fully charged. This is done by verifying that it is in its designated place, that it has not been actuated or tampered with, and that there is no obvious physical damage or condition to prevent its operation.**

**WARNING: FOR SAFETY PURPOSES, IF AN EXTINGUISHER SHOWS SIGNS OF CORROSION OR MECHANICAL DAMAGE, IT SHALL BE SUBJECTED TO A**

HYDROSTATIC PRESSURE TEST OR REPLACED.

### **PERIODIC INSPECTION PROCEDURES**

(Monthly or more often if circumstances dictate)

The inspection procedures outlined below may not be sufficient for every jurisdiction or location and should be used in conjunction with the latest NFPA 10 Standard for Portable Fire Extinguishers. Fire extinguishers shall be manually inspected when initially placed in service. The inspection is intended to give reasonable assurance that the extinguisher is fully charged and operable. This is done by seeing that it is in its designated place, has not been actuated or tampered with, and there is no obvious physical damage or condition to prevent operation.

[NFPA-10] Periodic inspection of fire extinguishers shall include a check of at least the following items:

1. Location in designated place.
2. No obstruction to access or visibility.
3. Fullness determined by weighing or hefting extinguishers,
4. Operating instructions on nameplate are legible and facing outward.
5. Safety seals and tamper indicators not broken or missing.
6. Examination for obvious physical damage, corrosion, leakage, or clogged nozzle.

### **MAINTENANCE (ref. 7.2 & 7.3 - NFPA 10, 2007)**

**[NFPA-10] At least once a year or more frequently if circumstances require, maintenance should be performed. Maintenance is a "thorough check" of the extinguisher. It is intended to give maximum assurance that a fire extinguisher will operate effectively and safely. It includes a thorough examination for physical damage or condition to prevent its operation and any necessary repair or replacement. It will normally reveal if hydrostatic testing or internal maintenance is required.**

Maintenance, servicing & recharging shall be performed by trained and certified persons having available the appropriate servicing manual, the proper types of tools, recharge materials, lubricants, and Victory replacement parts.

Fire extinguishers shall be subjected to maintenance at intervals of not more than 1 year, at the time of hydrostatic test, or when specifically indicated by an inspection. Extinguishers taken out of service for maintenance or recharge shall be replaced by spare extinguishers of the same type and at least an equal rating.

### **MAINTENANCE – SERVICE PROCEDURE**

**WARNING: BEFORE SERVICING BE SURE THE EXTINGUISHER AGENT CYLINDER IS NOT PRESSURIZED. THIS PROCEDURE IS BEST ACCOMPLISHED WITH THE EXTINGUISHER IN AN UPRIGHT POSITION AND ON A LEVEL SURFACE.**

1. Clean extinguisher to remove dirt, grease or foreign material. Check to make sure that the instruction nameplate is securely attached and legible. Inspect the cylinders for corrosion, abrasion, dents or weld damage. If any damage is found, hydrostatically test in accordance with instructions in CGA C-1 and C-6 and NFPA 10. Properly dispose of cylinder if in violation of the standard.
2. Inspect the extinguisher for damaged, missing or substitute parts. Only factory replacement parts are approved for use on Victory fire extinguishers.
3. Weigh the extinguisher and compare with weight printed in the "Maintenance" section on the nameplate (label). Recharge extinguisher if weight is not within indicated allowable tolerances. Any extinguisher not falling within the tolerance limits shall be properly recharged.
4. Check the date of manufacture printed on the extinguisher label (nameplate) or on the agent cylinder dome. The agent cylinder must be hydrostatically tested every 5 years to the test pressure indicated on the nameplate.
5. Check ring pin for freedom of movement. Replace if bent or if removal appears difficult.
6. Inspect discharge lever for any dirt or corrosion which might impair freedom of movement. Inspect carrying handle for proper installation. If lever, handle or rivets are damaged replace with proper Victory part(s).
7. Remove nozzle or hose and horn assembly and visually inspect inside valve body. Inspect nozzle or the hose & horn assembly for damage – replace as necessary. Blow air through nozzle or hose and horn to insure passage is clear of foreign material.
8. Inspect the 10, 15 & 20 lb. elbow for blockage or damage. The Victory 5 lb. CO2 diffuser is built into the swivel tube. Check elbow and swivel tube for blockage or damage. Replace damaged parts with Victory replacement parts only.
9. Reinstall horn and discharge tube (5 lb.) or hose and horn assembly (10, 15 & 20 lb.) to discharge valve. Check horn clip (10, 15 & 20 lb.) for damage and proper positioning. Replace, tighten or realign as necessary.
10. Inspect the valve assembly for corrosion or damage to hose thread connection. Replace valve assembly or component parts as necessary following the proper depressurization and recharge procedures. If valve removal is necessary, complete all steps in the Recharge Procedure.
11. Install nozzle or hose and horn assembly.
12. Install new tamper seal and record service data on the extinguisher inspection tag.
13. Replace the extinguisher on the wall hanger or in the vehicle bracket making sure that it fits the bracket properly and the bracket is securely attached – replace the bracket if necessary.

#### **COMPLETE MAINTENANCE – SIX YEAR TEARDOWN**

**[NFPA-10] Every six years, stored pressure extinguishers that require a 12 year hydrostatic test shall be emptied and subjected to the applicable maintenance procedures. When the applicable maintenance procedures are performed during periodic recharging or hydrostatic testing, the six year requirement shall begin from that date.**

**NOTE: Some states have legislation which requires "Complete Maintenance" on an annual basis. Please contact your local Victory Distributor to see if these requirements apply to you.**

**WARNING: Before attempting to disassemble the extinguisher be sure it is completely depressurized.**

1. Discharge all remaining CO<sub>2</sub>, making sure there is no remaining pressure. Make sure that the extinguisher is completely empty and depressurized.
2. Clean extinguisher to remove dirt, grease or foreign material. Check to make sure that the instruction nameplate is securely fastened and legible. Inspect the cylinder for corrosion, abrasion, dents or weld damage. If any of these conditions are found and you doubt the integrity of the cylinder, hydrostatically test to factory test pressure marked on the nameplate (label), using the proof pressure method, in accordance with DOT 3AL, CGA C-1 and NFPA 10.
3. Inspect the extinguisher for damaged, missing or substitute parts. **ONLY FACTORY REPLACEMENT PARTS ARE APPROVED FOR USE ON VICTORY FIRE EXTINGUISHERS.**
4. Check the date of manufacture on the extinguisher label (nameplate). Cylinder must be hydrostatically (proof pressure) tested every 5 years to the test pressure indicated on the nameplate according to DOT 3AL .
5. Check ring pin for freedom of movement. Replace if bent or if removal appears difficult.
6. Inspect discharge lever for any dirt or corrosion which might impair freedom of movement. Inspect carrying handle for proper installation. If lever, handle or rivets are damaged, replace with proper Victory parts.
7. Remove nozzle or hose and horn assembly and visually inspect threads on nozzle or hose coupling, horn and hose for damage, and replace as necessary. Blow air through nozzle or hose and horn to insure passage is clear of foreign material.
9. Inspect the valve assembly for corrosion or damage to nozzle or hose thread connection. Replace valve assembly or component parts as necessary.
10. Inspect the 10, 15 & 20 lb. elbow for blockage or damage. The Victory 5 lb. CO<sub>2</sub> diffuser is built into the swivel tube. Check elbow and swivel tube for blockage or damage. Replace damaged parts with Victory replacement parts only.
11. Complete steps 3 through 14 of Recharge Procedure.

## **RECHARGE**

### **WARNING:**

- a. Before attempting to disassemble, be sure the extinguisher is completely depressurized.**
- b. Never have any part of your body over the extinguisher while removing the valve assembly.**
- c. Use a protective shield between you and the pressure gauge while charging an extinguisher. Do not stand in front of the gauge if a shield is not available.**
- d. Check and calibrate regulator gauge at frequent intervals.**

**e. Never leave an extinguisher connected to a regulator of a high pressure source for an extended period of time. A defective regulator could cause the cylinder to rupture due to excessive pressure.**

### **RECHARGING PROCEDURE**

1. Perform steps 1 through 10 of the "Complete Maintenance (Six Year Teardown)" section.
2. Discharge all remaining carbon dioxide from the extinguisher.
3. Inspect the cylinder interior following CGA Visual Inspection Standard C-6.
4. Reassemble the valve assembly, including dip tube and set aside.
5. Check the extinguisher nameplate (label) for the proper amount of CO<sub>2</sub> to be pumped into the extinguisher. **DO NOT OVERFILL.**
6. Install the proper recharge adaptor. Adaptor must fit over diffuser tip on 5lb. Discharge Tube and elbow on 10, 15 & 20lb. without blocking diffuser holes. **DO NOT REMOVE 5 LB. DISCHARGE TUBE OR 10, 15 & 20LB. ELBOW.**
7. Place extinguisher on an accurate scale and attach carbon dioxide supply line to the recharge adaptor.
8. Attach a device such as a "pony spring clamp" to hold the extinguisher valve lever in the squeezed or open position. Pump the proper amount of CO<sub>2</sub> into the extinguisher.
9. When the proper weight is reached, release the clamp, shut off the CO<sub>2</sub> pump and vent the supply line.
10. Remove the CO<sub>2</sub> supply line and recharge adapter from the extinguisher valve.
11. Install pull pin. Check for leaks using leak detection fluid or a solution of soapy water. If any leaks occur, refer to the TROUBLESHOOTING GUIDE.
12. Install tamper seal and attach new recharge tag.
13. Attach the horn or hose assembly to the extinguisher valve.
14. Weigh assembled extinguisher and confirm that the total weight is within the allowable tolerances indicated on the extinguisher stamped on valve.

**CAUTION: Filling by eye alone could cause potentially dangerous overfilling – always use a scale.**

10. Check extinguisher for leaks by applying detecting fluid or a solution of soapy water to the nitrogen charging adapter orifice, around the collar o-ring sealing area, cylinder welds and gauge. Remove the nitrogen charging adapter. Blow air or nitrogen into the interior of the valve assembly to remove any remaining leak detecting fluid. Wipe exterior of extinguisher to remove any remaining residue.

### **TROUBLESHOOTING GUIDE**

**WARNING: Determine the source of a leak before the extinguisher is depressurized. The extinguisher must be completely depressurized before any attempt is made to devalue it and correct a leakage problem. To depressurize – hold the extinguisher in an inverted position and slowly squeeze the discharge handle. Some chemical remaining in the dip tube will be expelled so care should be taken in the area being used for depressurizing. Thoroughly clean all valve parts after depressurization and valve removal.**

**Victory CO<sub>2</sub> valve bodies and aluminum cylinders are 1 1/8" – 12 UNF STRAIGHT THREADS. When**

reinstalling the valve assembly, the cylinder must be placed in a suitable securing vice and valve installed hand tight.

	<b>PROBLEM</b>	<b>CORRECTIVE ACTION</b>
1	Leak at collar o-ring	Remove valve assembly, remove and discard o-ring, Clean o-ring groove on valve and install new collar o-ring.
2	Leak through valve	Check valve stem seating area for scratches or foreign matter. Clean seating area with soft cloth. Install new valve stem assembly.
3	Leakage from safety Relief nut	Remove safety nut, disc and gasket assembly. Replace with new Strike First safety nut, disc & gasket assembly. Tighten assembly to 25 ft-lbs. of torque.
5	Leak during discharge	Tighten hose connection at elbow (10, 15 & 20 lb.). Or Replace swivel assembly on 5 lb.
6	Defect in Cylinder	Contact a Victory dealer if under warranty, otherwise – mark “CONDEMNED” and remove from service or return to owner.

#### **LIMITED WARRANTY**


Victory warrants its fire extinguishers (“Products”) to be free from defects in material and workmanship for a period of six (5) years from the date of manufacture. Victory’s responsibility for defects in material or workmanship are limited to repair or replacement of the products for the original retail purchaser (“Consumer”) only. This limited warranty does not cover defects resulting from modification, abuse, accident, alteration, misuse, exposure to corrosive conditions, or improper installation or maintenance. Victory is not responsible for the installation or the maintenance of the Products.

Defective Products for which a valid claim has been made shall be returned to Victory’s facility for repair or replacement (or to other repair facilities pursuant to Victory’s prior written authorization), and transportation costs to such locations shall be paid by Consumer.

VICTORY DOES NOT ACCEPT LIABILITY BEYOND THE REMEDIES PROVIDED IN THIS LIMITED WARRANTY, WHETHER BASED ON CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHERWISE, INCLUDING WITHOUT LIMITATION DAMAGES FOR ANY PERSONAL INJURY, PROPERTY DAMAGE, OR ANY DIRECT, INDIRECT, SPECIAL, CONSEQUENTIAL, INCIDENTAL, EXEMPLARY OR PUNITIVE DAMAGES, AND INCLUDING WITHOUT LIMITATION ANY LIABILITY FOR THIRD PARTY CLAIMS, IN EACH CASE EVEN IF STRIKE FIRST HAS BEEN ADVISED OF THE POSSIBILITY THEREOF. LAWS OF SOME JURISDICTIONS DO NOT ALLOW THE DISCLAIMER OF CONSEQUENTIAL OR OTHER TYPES OF DAMAGES, AND CONSUMERS MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION. UNDER SUCH CIRCUMSTANCES, THIS LIMITED WARRANTY AND THE LIMITATIONS AND



# VICTORY-FIRE EXTINGUISHER PARTS

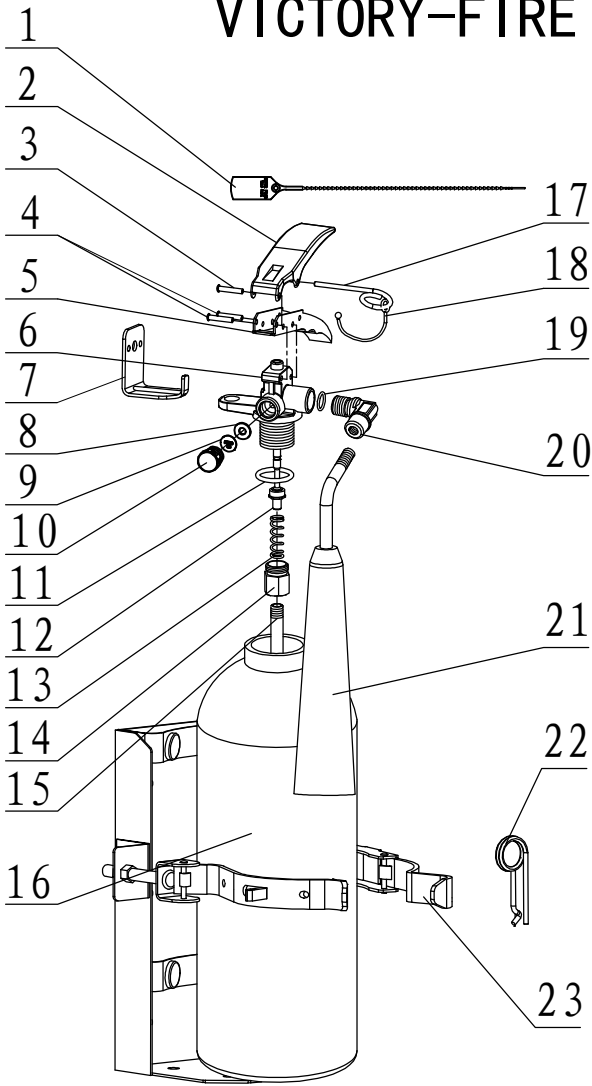


## C05LB

No.	Product Code	Descriptions	Drawing number
1	0714025	Seal	ZX-014-013
2	0202148	Lever	ZX-BS-82-01A
3	0204029	Rivet $\phi 4 \times 25.5$	ZX-MD-100
4	0204021	Rivet $\phi 4 \times 21$	ZX-MD-100
5	0203125	Carry Handle	ZX-BS-82-02A
6	020504042	Valve body (Chrome plated)	ZX-3U-01-02
7	070200005	Pothook	ZX-017-017
8	022304009	Safety gasket	ZX-DP-98
9	0233007	Safety Disc	ZX-BXP-12A
10	0212043	Safety cap	ZX-BXM-47
11	020601126	O Ring of neck $\phi 28.17 \times \phi 3.53$	ZX-0XQ-207
12	0220110	Valve stem assembly	ZX-3U-01-03
13	020701010	Spring	ZX-TH-06
14	020801036	Tube holder (Ecru oxidation)	ZX-THZ-66
15	080402047	Dip tube	ZX-009-052
16	050100088	Cylinder	ZX-001-512
17	020901003	Safety pin	ZX-BXX-33
18	0210002	Chain	ZX-XJL-01
19	020601127	O Ring $\phi 11.8 \times \phi 2.4$	ZX-0XQ-207
20	0242021	Connector	ZX-020-087
21	080100046	Horn assembly	ZX-059-036-00
22	020901033	safety pin	ZX-BXX-43
23	070100015	5LB Bracket	ZX-016-091-00


## VICTORY-FIRE EXTINGUISHER PARTS

### C010LB

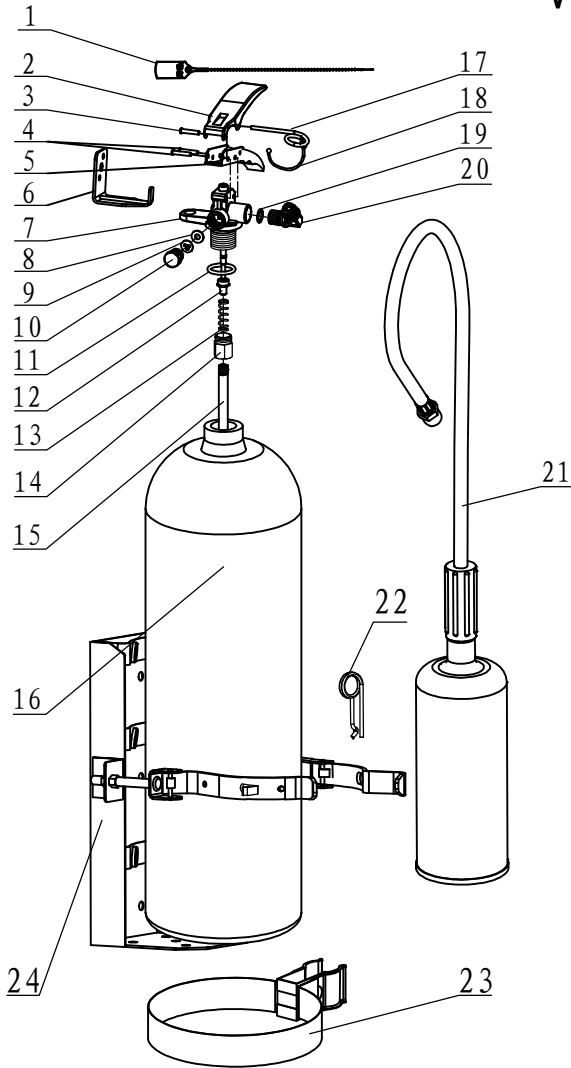

No.	Product Code	Descriptions	Drawing number
1	0714025	Seal	ZX-014-013
2	0202148	Lever (iron)	ZX-BS-82-01A
3	0204029	Rivet $\phi 4 \times 25.5$	ZX-MD-100
4	0204021	Rivet $\phi 4 \times 21$	ZX-MD-100
5	0203125	Carry Handle	ZX-BS-82-02A
6	070200007	Pothook	ZX-017-016
7	020504042	Valve body (Chrome plated)	ZX-3U-01-02
8	022304009	Safety gasket	ZX-DP-98
9	0233007	Safety Disc	ZX-BXP-12A
10	0212043	Safety cap	ZX-BXM-47
11	020601126	O Ring of neck $\phi 28.17 \times \phi 3.53$	ZX-0XQ-207
12	0220110	Valve stem assembly	ZX-3U-01-03
13	020701010	Spring	ZX-TH-06
14	020801036	Tube holder (Ecru oxidation)	ZX-THZ-66
15	080402020	Dip tube	ZX-009-052
16	050100089	Cylinder	ZX-001-511
17	020901003	Safety pin	ZX-BXX-33
18	0210002	Chain	ZX-XJL-01
19	020601127	O Ring $\phi 11.8 \times \phi 2.4$	ZX-0XQ-207
20	0242022	Connector	ZX-020-088
21	080100047	Horn assembly	ZX-059-037-00
22	020901033	safety pin	ZX-BXX-43
23	070200015	Hoop Assembly	ZX-013-030A-00
24	070100016	10LB/15LB Bracket	ZX-016-092-00


# VICTORY-FIRE EXTINGUISHER PARTS

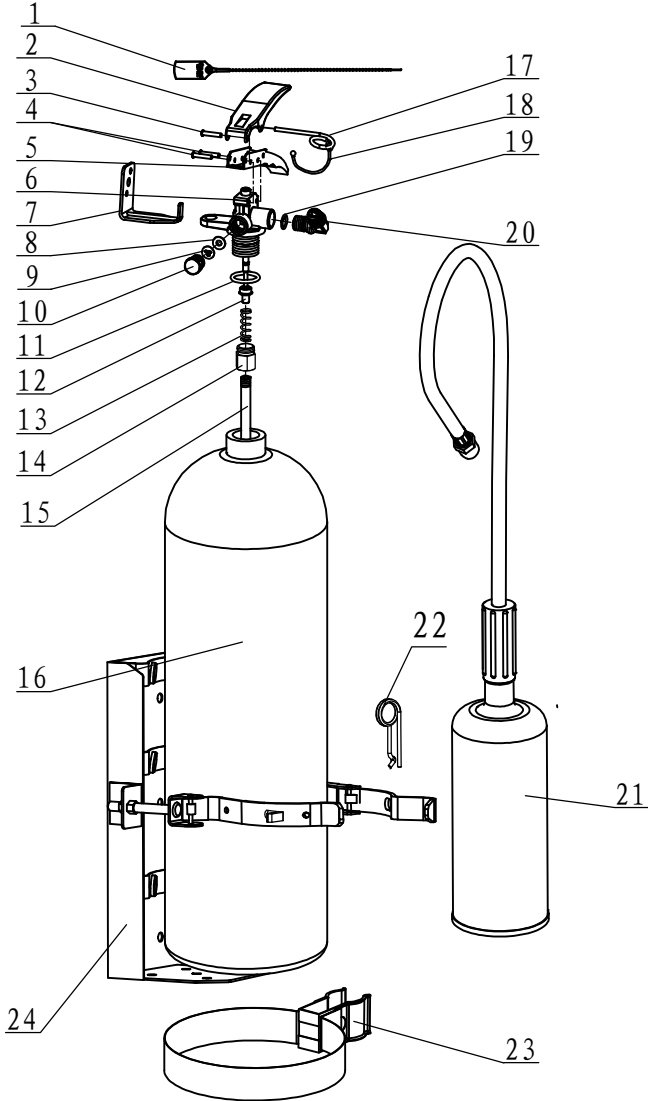

## C015LB

No.	Product Code	Descriptions	Drawing number
1	0714025	Seal	ZX-014-013
2	0202148	Lever (iron)	ZX-BS-82-01A
3	0204029	Rivet $\phi 4 \times 25.5$	ZX-MD-100
4	0204021	Rivet $\phi 4 \times 21$	ZX-MD-100
5	0203125	Carry Handle	ZX-BS-82-02A
6	020504042	Valve body (Chrome plated)	ZX-3U-01-02
7	070200007	Pothook	ZX-017-016
8	022304009	Safety gasket	ZX-DP-98
9	0233007	Safety Disc	ZX-BXP-12A
10	0212043	Safety cap	ZX-BXM-47
11	020601126	O Ring of neck $\phi 28.17 \times \phi 3.53$	ZX-0XQ-207
12	0220110	Valve stem assembly	ZX-3U-01-03
13	020701010	Spring	ZX-TH-06
14	020801036	Tube holder (Ecru oxidation)	ZX-THZ-66
15	080402048	Dip tube	ZX-009-052
16	050100090	Cylinder	ZX-001-511
17	020901003	Safety pin	ZX-BXX-33
18	0210002	Chain	ZX-XJL-01
19	020601127	O Ring $\phi 11.8 \times \phi 2.4$	ZX-0XQ-207
20	0242022	Connector	ZX-020-088
21	080100047	Horn assembly	ZX-059-037-00
22	020901033	safety pin	ZX-BXX-43
23	070200015	Hoop Assembly	ZX-013-030A-00
23	070100016	10LB/15LB Bracket	ZX-016-092-00

# VICTORY-FIRE EXTINGUISHER PARTS

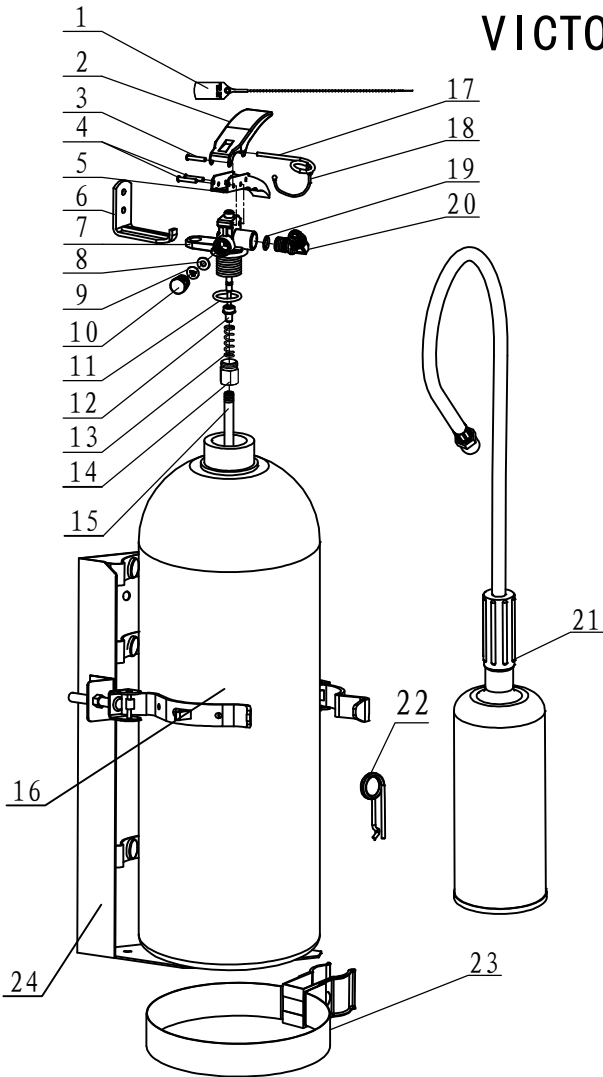

## C020LB

No.	Product Code	Descriptions	Drawing number
1	0714025	Seal	ZX-014-013
2	0202148	Lever (iron)	ZX-BS-82-01A
3	0204029	Rivet $\phi 4 \times 25.5$	ZX-MD-100
4	0204021	Rivet $\phi 4 \times 21$	ZX-MD-100
5	0203125	Carry Handle	ZX-BS-82-02A
6	070202004	Pothook	ZX-017-004
7	020504042	Valve body (Chrome plated)	ZX-3U-01-02
8	022304009	Safety gasket	ZX-DP-98
9	0233007	Safety Disc	ZX-BXP-12A
10	0212043	Safety cap	ZX-BXM-47
11	020601126	O Ring of neck $\phi 28.17 \times \phi 3.53$	ZX-0XQ-207
12	0220110	Valve stem assembly	ZX-3U-01-03
13	020701010	Spring	ZX-TH-06
14	020801036	Tube holder (Ecrú oxidation)	ZX-THZ-66
15	080402047	Dip tube	ZX-009-052
16	050100091	Cylinder	ZX-001-510
17	020901003	Safety pin	ZX-BXX-33
18	0210002	Chain	ZX-XJL-01
19	020601127	O Ring $\phi 11.8 \times \phi 2.4$	ZX-0XQ-207
20	0242022	Connector	ZX-020-088
21	080100047	Horn assembly	ZX-059-037-00
22	020901033	safety pin	ZX-BXX-43
23	070200016	Hoop Assembly	ZX-013-031A-00
24	070100022	20LB Bracket	ZX-016-093-00